



# Gryphon™ Quick Reference Guide

## GENERAL KEYPAD OPERATION



Gryphon's MMI Screen has been designed with the end-user in mind. The MMI updates its interface as needed in each section. Always use the on-screen guidance, but when in doubt, this chart lists general sub-menu navigation tips.

When you are not using a menu, pressing a letter key dispenses a coin from the corresponding tube.

**COIN RETURN**  
Press to reject a coin, and open the acceptor door


**ACCEPTOR LATCH**  
Pull to open the acceptor assembly

**MMI**  
The man-machine interface is used to interact with and update the coin manager

**STATUS LEDS**  
Indicate the status of the coin manager with red, amber and green LEDs

**CASSETTE**  
Stores and routes coins for dispensing as change.

**DISPENSER**  
Dispenses coins being returned as change

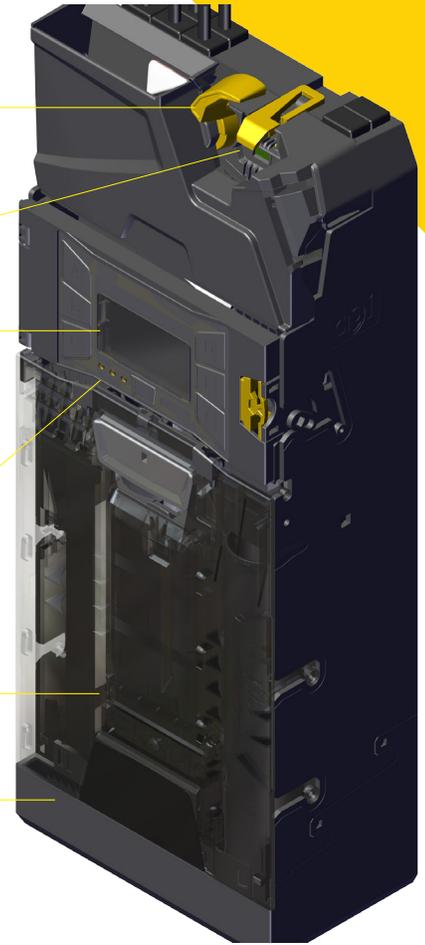

## MENU KEYPAD OPERATION

Navigation	Key
Scroll Up	D
Scroll Down	E
Scroll Down	A
Scroll Down	B
Scroll Down	F
Scroll Down	C
Scroll Down	Press ≡ once
Scroll Down	Hold ≡ for three seconds

## SYMBOLS

Symbol	Meaning
	Menu Navigation
	Gryphon is OK
	Gryphon requires assistance
	Gryphon requires replacing
	Connected via USB to PC
	Connected to USB
	Error

# CASSETTE CONFIGURATION

There are two methods to configure the cassette. **Please note: The cassette must be empty before proceeding.**

## Cassette Code

If you are changing the full cassette, press ≡, CASSETTE, then:

1. Enter the code located on the front of the cassette (e.g. AAB)
2. Press SAVE - if the code is not recognized, follow the Custom Cassette steps below
3. When prompted, press START to calibrate

## Creating Custom Cassette

Follow these steps if the code is not recognized or to change individual tubes. Press ≡, CASSETTE, then:

1. Select CUSTOM
2. Use the MMI to choose the tube (A-F) you'd like to edit
3. Scroll through the coin list and select your coin
4. Press SAVE to program the tube
5. When all tubes have been programmed, press ≡
6. When prompted, press START to calibrate

# SETUP MENU OPTIONS

Option	Meaning
Par	Change the mode, target levels, target value and create a snapshot
Change Management	Update the cassette tube fill level and payout mix
Machine Options	- Change: MDB level, safe count, float coins, coin scaling, decimal point reporting and country code - View coin counts
Coin Config	Change setup for individual coins and update exchange rate
Audit Config	View audit info
General	Calibrate tubes, change accepted currency, set the Clean Me level, and update general Gryphon interface settings
Error Log	View recent errors
Test	Run tests to confirm optimal operation
Language	Change the language

Option	Meaning
General	Calibrate tubes, change accepted currency, set the Clean Me level, and update general Gryphon interface settings
Error Log	View recent errors
Test	Run tests to confirm optimal operation
Language	Change the language

# AUDIT

---

Press  $\equiv$  twice quickly (with the cassette in) to display audit information. Each section will display for three seconds before showing the amount of change in each tube.

## PAR

---

**Par to Level:** Sets the fill level for each coin. Coins above that level are sent to the cash-box.

**Par to Value:** Sets the fill level to a total cassette value. Once the value is achieved, coins are sent to the cash-box. Gryphon dynamically alters the individual coin levels to minimize the need for manual refills.

**Auto Par:** Gryphon determines the optimal Par Level for your machine based on actual coin usage.

## INITIAL POWER UP

---

The coin manager will power up and check how many coins are in each tube. If the tubes are low, Gryphon will tell you which tubes to fill. You should fill all tubes with a minimum of three coins per tube.

## CASSETTE CONFIGURATION

---

It's easy to customize Gryphon's cassette. Use one of the many stock configurations or create your own. There are two methods to configure the cassette. **Please note: The cassette must be empty before proceeding.**

### Cassette Code

If you are changing the full cassette, press  $\equiv$ , CASSETTE, then:

1. Enter the code located on the front of the cassette (e.g. AAB)
2. Press SAVE - if the code is not recognized, follow the Custom Cassette steps below
3. When prompted, press START to calibrate

### Creating Custom Cassette

Follow these steps if the code is not recognized or to change individual tubes. Press  $\equiv$ , CASSETTE, then:

1. Select CUSTOM
2. Use the MMI to choose the tube (A-F) you'd like to edit
3. Scroll through the coin list and select your coin
4. Press SAVE to program the tube
5. When all tubes have been programmed, press  $\equiv$
6. When prompted, press START to calibrate

## STATUS LIGHTS

---

The three status lights to the left of the  $\equiv$  key are used to quickly identify Gryphon's status.

Color	Message
Green	The unit is functioning properly
Yellow	The unit requires adjustment, see the MMI for instructions
Red	The unit requires maintenance and should be returned to a service center

# SERVICE MODE

---

Press ≡ to view commonly used Service Mode options; further options are available in the Setup menu.

## SETUP

---

**Setup is a hierarchal menu, navigable by the MMI. The setup menu allows you to:**

- View messages
- Change par styles, par levels and par value
- Manage change
- Change cassettes or tubes
- Token teach
- Perform Self-Test
- View error log
- Change audit setup
- Set up MDB options

---

### Compliance

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (a) This device may not cause harmful interference, and (b) this device must accept any interference received, including interference that may cause undesired operation.

Except as permitted under the relevant local legislation, no part of this publication may be copied, transmitted, transcribed, or distributed in any form or by any means, or stored in a database or retrieval system, or translated in any language (natural or computer), without the prior written permission of CPI.

CPI reserves the right to change the product or the product specifications at any time. While every effort has been made to ensure that the information in this publication is accurate, CPI disclaims any liability for any direct or indirect losses (howsoever caused) arising out of use or reliance on this information. This document does not necessarily imply product availability. Note: Your product may differ slightly from some of the illustrations in this document.

CPI Corporate Headquarters  
3222 Phoenixville Pike  
Suite 200  
Malvern, PA 19355  
CranePI.com

